




Fröjdamark

Heated sweater

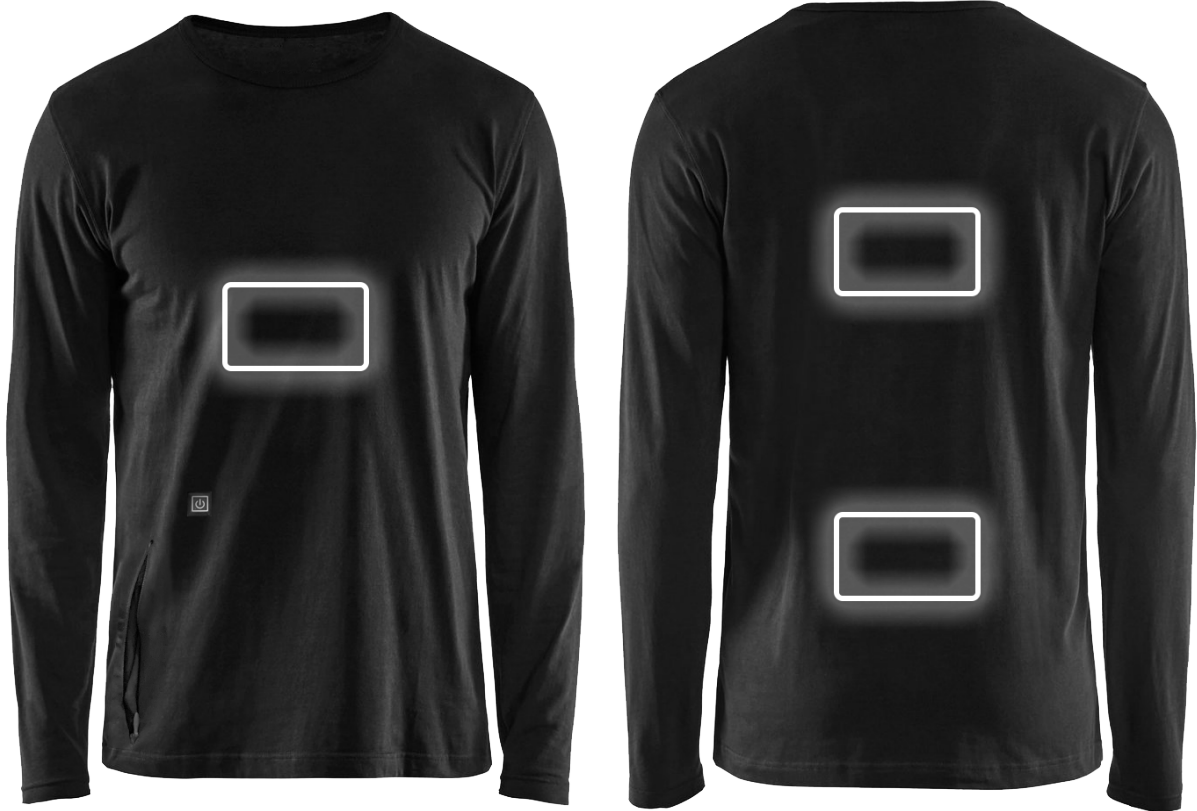

1. Connect the power bank, button will light up red/ white/ blue color
2. Long press to turn on the heating process
3. Press one time to change the temperature
 - Red Hot - 50 degree
 - White Medium - 40 degree
 - Blue Low - 30 degree
4. Long press to turn off the heating process

Heating time:

Based on powerbank with 10,000 mAh

input DC 5V / 2A

output 5V / 2A

H-red ---2.5h

M-white ---4.0h

L-blue ---6.0h



Wash, gently at 40



Do not bleach



Do not tumble dry



Do not dry clean



Do not iron

MADE IN CHINA

Imported by
Company Solutions Sweden AB
[info@Companysolutions.se](mailto:info@ Companysolutions.se)

Warning

- “Mode 3- LOW temperature position” is the continuous use position of the appliance! Do not use it on Medium or High mode for an extended time as this may cause discomfort or even harm your body.
- Not suitable for children to use. Children shall not play with the appliance.
- This appliance must not be used by persons insensitive to heat and other vulnerable persons who are unable to react to overheating;
- The appliance is not intended for medical use in hospitals.
- If you are feeling not well, please take off the heated jacket immediately and consult your doctor
- In order to avoid the possibility of heatstroke, disconnect the clothing when moving to an environment having significantly higher temperature.
- Do not be worn directly against skin to avoid scald.