

Assembly Instructions Garden Cart with Mesh Sides

To attach the wheels:



2x split pins



2x washers




14x spring locking pins



4x hex bolts with nut and washer
4x x-head bolts with nut and washer



Attach the drawbar bracket to the bottom of the cart with 4x x-head bolts.

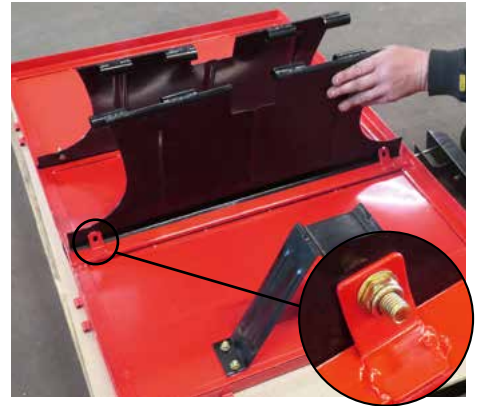

Insert the wheel plates and fasten them with 2x hex bolts in each plate. Use 2x 13mm spanners when you screw them in.



Attach the axle and the drawbar as shown in the picture.



Put the wheels on the axle, add the washers and fasten with the split pins (one on each side).



The drawbar is locked in the drawbar bracket.



Attach the frontboard and the sides and lock them with spring locking pins.



Attach the tailboard as shown in the picture. Clasp the top as shown in the little picture.



Attach the mesh sides to the cart and fasten them with spring locking pins.



The mesh sides can be clasped at the top as shown in the pictures.



Tilt the cart by pulling the spring loaded locking mechanism. NB! The tailboard must be removed before tilting.